

FORM FIT HOOD PROTECTOR

Hyundai Azera 2006-2009

HD 10J 06

Thank you for purchasing a FORM FIT hood protector.

Care Instructions


- Clean the protector with a mild soap and water solution or plastic cleaner only.
- Periodically check to make sure all the hardware is in place and the protector is secure.

Attention!



Do not use chemicals or solvents. Avoid using automatic car washes. Do not pull on the protector when opening or closing the hood.

Hardware Kit



Tools Required



Installation Instruction

1. Be sure that the hood is clean and dry inside and out. Release the hood, but do not open it.
 2. Install the bumpers as shown in *Illustration #1*. **Attention: The bumpers must be installed on the hood, not on the protector!!!** If the bumpers are installed on the protector, they will wear through the paint.
 3. Center the protector on the hood, resting on the bumpers.
 4. Peel and fold an anti-abrasion film pad in half over the edge of the hood, underneath each of the two (2) inner holes in the protector. See *Illustrations #2 and #3 - Step 4*.
 - 5a) Place a clip over each of the anti-abrasion film pads on the edge of the hood as shown below in *Illustration #3 - Step 5a*.
 - b) Insert a pin through the protector into each of the clips. See *Illustration #3 - Step 5b*.
 - c) Insert a #6 x 5/8" screw through an 'L'-bracket and into the clip. See *Illustration #3 - Step 5c & 5d*.
 - d) Make sure all the components are well seated together; the protector is centered on the hood, and then tighten the screws into the clips.
 6. Repeat steps #4 and #5 for the other two (2) holes.
 7. On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.
- Note: Do not pull on the protector when opening or closing the hood.**

Illustration # 1: Bumper Placement

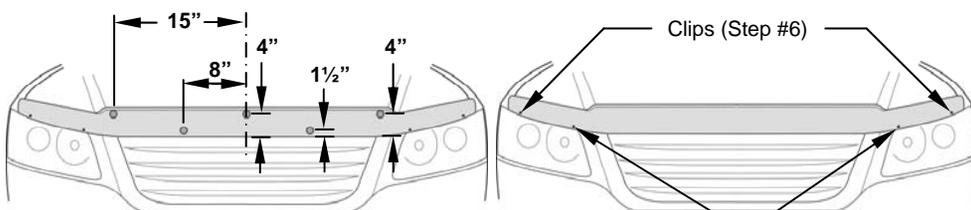


Illustration # 2: Clip Location


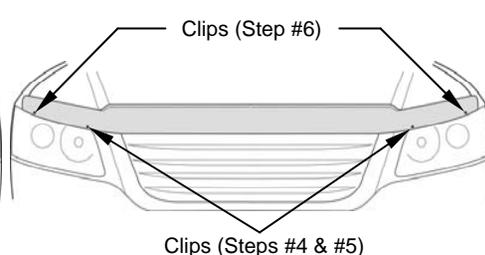


Illustration # 3: Clip Configuration – Patent No.6,892,427

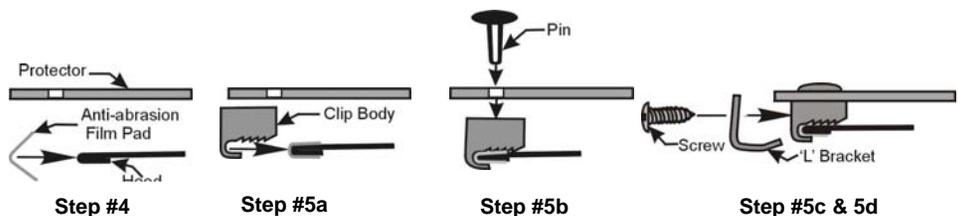

Made in Canada

Rev1.100129

FORM FIT HOOD PROTECTOR

Hyundai Azera 2006-2009

HD 10J 06

Thank you for purchasing a FORM FIT hood protector.

Care Instructions

- Clean the protector with a mild soap and water solution or plastic cleaner only.
- Periodically check to make sure all the hardware is in place and the protector is secure.

Attention!



Do not use chemicals or solvents. Avoid using automatic car washes. Do not pull on the protector when opening or closing the hood.

Hardware Kit



Tools Required



Installation Instruction

1. Be sure that the hood is clean and dry inside and out. Release the hood, but do not open it.
 2. Install the bumpers as shown in *Illustration #1*. **Attention: The bumpers must be installed on the hood, not on the protector!!!** If the bumpers are installed on the protector, they will wear through the paint.
 3. Center the protector on the hood, resting on the bumpers.
 4. Peel and fold an anti-abrasion film pad in half over the edge of the hood, underneath each of the two (2) inner holes in the protector. See *Illustrations #2 and #3 - Step 4*.
 - 5a) Place a clip over each of the anti-abrasion film pads on the edge of the hood as shown below in *Illustration #3 - Step 5a*.
 - b) Insert a pin through the protector into each of the clips. See *Illustration #3 - Step 5b*.
 - c) Insert a #6 x 5/8" screw through an 'L'-bracket and into the clip. See *Illustration #3 - Step 5c & 5d*.
 - d) Make sure all the components are well seated together; the protector is centered on the hood, and then tighten the screws into the clips.
 6. Repeat steps #4 and #5 for the other two (2) holes.
 7. On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.
- Note: Do not pull on the protector when opening or closing the hood.**

Illustration # 1: Bumper Placement

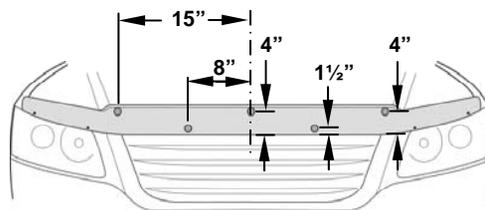


Illustration # 2: Clip Location


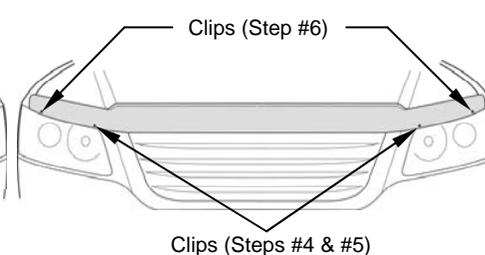


Illustration # 3: Clip Configuration – Patent 6,892,427

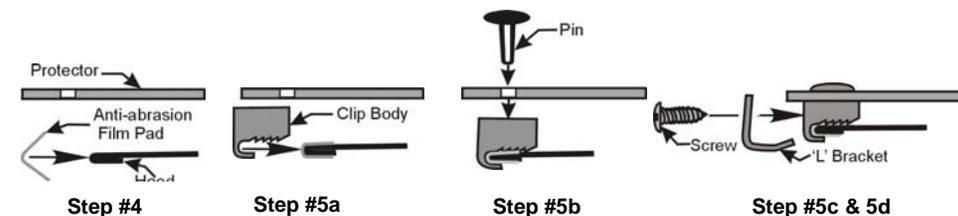

Made in Canada

Rev1.100129