

FORM FIT HOOD PROTECTOR

Hyundai Entourage 2007 -

HDW 10K 07

Hardware Kit

- 6 – Large Bumpons
- 4 – Anti-Abrasion Film Pads
- 4 – Clip Bodies
- 4 – Pins
- 4 – # 6 x 5/8" Flat Head Screws
- 4 – 'L' Brackets

Tools Required

- 1 – Phillips Screwdriver # 2
- 1 – Tape Measure



Installation

1. Be sure that the hood is clean and dry inside and out.
2. Install the bumpons on the hood as shown in *illustration #1A*. **Attention: The bumpons must be installed on the hood not on the protector!!!!** If the bumpons are installed on protector, they will wear through the paint.
3. Center the protector on the hood and rest it on the bumpons.
4. Peel and fold the anti-abrasion film pads in half over the edge of the hood. Place them underneath the two (2) inner holes on the protector. See *illustrations #1B & #2 – Step 4*.
5. a) Place a clip over each of the anti-abrasion film pads. See *illustration #2 – Step 5a*.
b) Insert a pin through the protector and into each of the clips. See *illustration #2 – Step 5b*.
c) Insert the #6 x 5/8" screw through the 'L'- bracket and into the clip. See *illustration #2 – Step 5c & 5d*.
d) Make sure all the components are well seated together and that the protector is centered on the hood. Tighten the screws into the clips.
6. **Repeat step #5 and #6 for the remaining two (2) holes.**
7. On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.

Note: Do not pull on the protector when opening or closing the hood.

Care Instruction

Clean the protector with a mild soap and water solution or plastic cleaner only. Do not use chemicals or solvents. Periodically check to make sure that all hardware is in place and that the protector is secure. Avoid using automatic car washes. Do not pull on the protector when opening or closing the hood.

Illustration #1: Bumpons and Clips Location


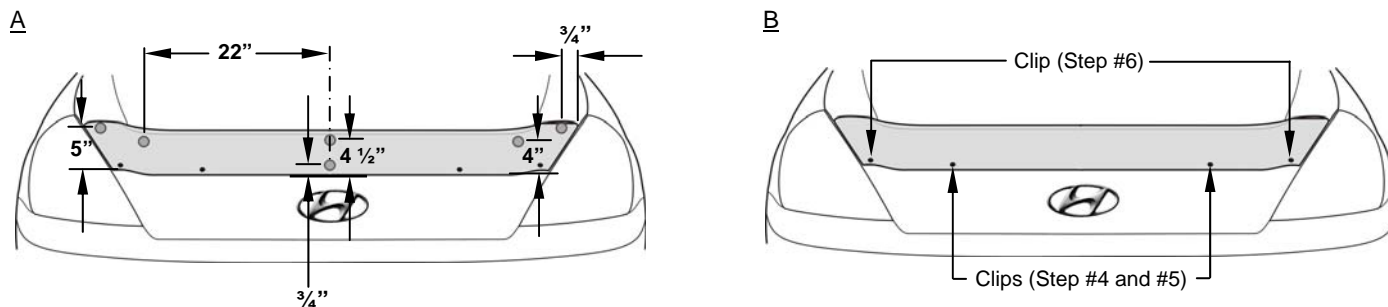


Illustration #2: Clip Configuration – Patent No. 6,892,427

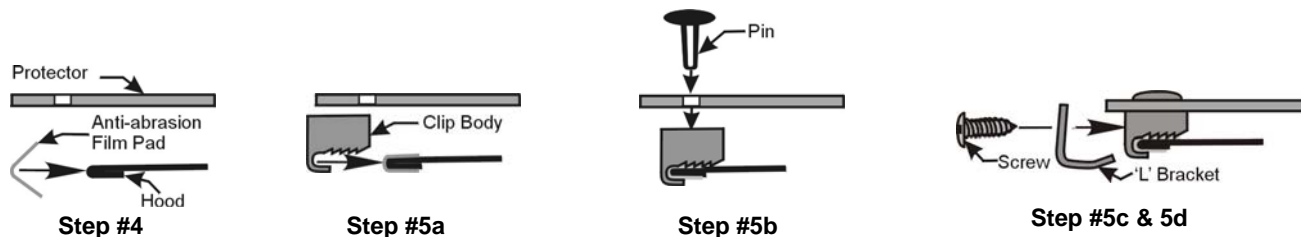

Thank you for purchasing a **FORM FIT** hood protector.
Retain this sheet for care instructions and kit information
Made in Canada

Rev1.100129