

Installation Instructions

Hyundai Genesis Sedan 09-13

HARDWARE KIT

- 2 . Bumpons
- 3 . Adhesive-backed pedestals
- 5 . Push-type retainers
- 2 . Protector supporting clips
- 1 . Surface cleaner wipe

TOOLS REQUIRED

- 1 . Phillips Screwdriver # 2
- 1 . Tape measure
- 1 . Masking tape
- 1- Soft cloth or paper towel

INSTALLATION INSTRUCTION

1. Be sure that the hood is clean and dry inside and out.
 2. Install the bumpons on the hood as shown in *illustration #1*. **Attention: The bumpons must be installed on the hood not on the protector!!!** If the bumpons are installed on protector, they will wear through the paint.
 3. Dry fit the three (3) adhesive-backed pedestals using masking tape to hold them in position. The first location is at the center of the hood 3mm back and parallel with the trailing edge of the chrome hood molding. The second and the third locations are 380mm to the left and right of the center mark, 3mm back and parallel with the trailing edge of the chrome hood molding.
 4. Place the hood protector on top of the adhesive-backed pedestals.
 5. Confirm alignment and make any required adjustments of adhesive-backed pedestals.
 6. Remove protector, and using masking tape mark the perimeters of the adhesive-backed pedestals. Remove pedestals and wipe area with the surface cleaner wipe. Wipe dry with a soft cloth or paper towel.
 7. Remove the protective backing from the pedestals and place them accurately in the areas outlined with masking tape. After placing, remove masking tape and wet out+tape to the hood surface by applying pressure with your thumb around the surface of the pedestals.
 8. Position the hood protector over the adhesive backed pedestals aligning the holes in the protector with the square holes in the pedestals. Insert a push-type retainer+through the hole in the protector, and into the pedestal. Ensure the protector is well seated against the surface of the pedestal and push the center pin of the retainer assembly to lock it into place. See *illustration #2*.
- Note:** Engaging the center pin of the "push type retainer" is best accomplished by placing a #2 Philips drive screwdriver into the recess of the center pin. Use a light force or tap on the end of the screwdriver to seat the pin into the retainer. The retainer can be removed by unthreading the center pin in the conventional manner with a Phillips screwdriver, however initial or subsequent placement is best performed using the "push" method described above.
9. Place the supporting clips (side location), over the edge of the hood and align the clip hole with the hole in the protector. Using the same technique as in step #8, insert push type retainer through the protector and into the supporting clip.
 10. On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.
NOTE: Do not pull on the protector when opening or closing the hood.

CARE INSTRUCTIONS

Clean the protector with a either a mild soap/water solution or utilize a plastic cleaner. Do not use chemicals or solvents. Periodically check to make sure the bumpons are in place and that the protector is secure. **Avoid using automatic car washes.**

ILLUSTRATION #1 – BUMPONS LOCATION


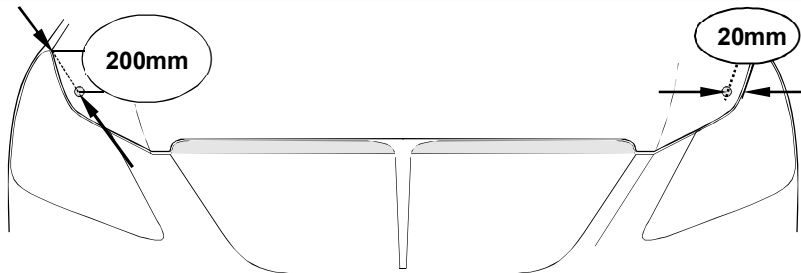


ILLUSTRATION #2 – PEDESTAL LOCATION

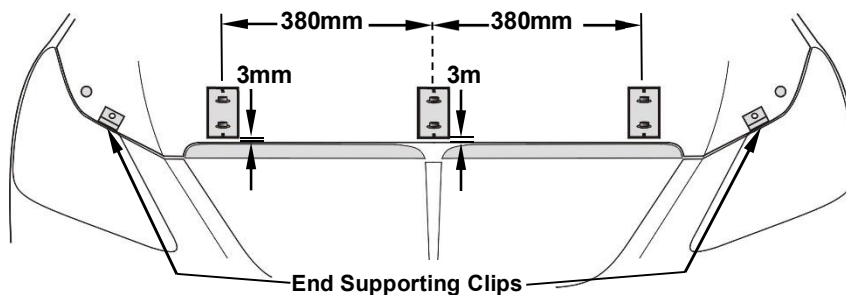

Thank you for purchasing a **FORMFIT** plastic hood protector. Retain this sheet for care instructions and kit information.

Installation Instructions

Hyundai Genesis Sedan 09-13

TROUSSE DE FIXATIONS

- 2 . Grosses butées
- 3 . Adhésifs piédestaux
- 5 . Push type de retenue
- 2 . Agrafes de support
- 1 . Promoteur adhésif 3M
- 1 . Tampon imbibé d'alcool

OUTILS REQUIS

- 1 . Tournevis à embout étoilé n° 2
- 1 . Ruban à mesurer
- 1 . Roll tape adhésifs

INSTRUCTIONS D'ASSEMBLAGE

1. S'assurer que le capot est propre et sec à l'intérieur comme à l'extérieur.
 2. Collez les butées, sur le capot. **Voir l'illustration n° 1. Attention: Les butées doivent être posées sur le capot et non sur le protecteur!!!** Si les butées sont installées sur le protecteur, elles endommageront la peinture.
 3. Sec répondre aux trois (3) dos adhésif piédestaux en utilisant du ruban adhésif pour les maintenir en position. Le premier emplacement est au centre du capot de 3 mm en arrière et en parallèle avec le bord de fuite du capot chrome moulage. La deuxième et la troisième sont des lieux 380mm à gauche et à droite de la marque centre, 3 mm en arrière et parallèle du bord de fuite du capot chrome moulage.
 4. Placez le capot protecteur au-dessus du dos adhésif piédestaux.
 5. Confirmer l'alignement et de faire des ajustements nécessaires des adhésifs piédestaux.
 6. Supprimer protecteur, et l'utilisation de ruban adhésif marquer le périmètre du dos adhésif piédestaux, et essuyez zone tampon avec de l'alcool. Après l'alcool a séché, appliquer l'adhésif promoteur pour la zone de montage. Suivez les instructions sur le promoteur à l'emploi. Laisser l'adhésif promoteur à sec.
 7. Retirez la protection de soutien les piédestaux et les placer avec précision dans les domaines définis avec du ruban adhésif. Après la mise en place, enlever du ruban adhésif et "humide" ruban sur le capot de surface par l'application de pression avec votre pouce autour de la surface des piédestaux. Nettoyer les résidus de Promoteur essuyant avec de tampon imbibé d'alcool.
 8. Placez le capot protecteur sur le dos adhésif piédestaux alignant les trous du protecteur avec le carré des trous dans les pieds. Insérer un "push type de retenue" à travers le trou dans le protecteur, et dans le piédestal. Assurer le protecteur est bien assis contre la surface du socle et appuyez sur le centre de la broche de retenue d'assemblage pour la verrouiller en place. *Voir l'illustration n° 2.*
- Note:** Faire participer le centre de la broche "pus type de retenue" est le mieux accompli par une mise # 2 tournevis Philips lecteur dans la niche du centre broches. Utilisez une lumière vigueur ou tapez sur la fin du tournevis pour siège la goupille dans la retenue. La retenue peut être éliminé par le centre broches dans la manière conventionnelle avec un tournevis Philips, toutefois initiale ou ultérieure de placement est effectué en utilisant mieux le "pus" méthode décrite ci-dessus.
9. Place les agrafes (côté endroit), sur le bord de la hotte et d'aligner le clip trou avec le trou dans le protecteur. En utilisant la même technique que dans l'étape 8, insérer pousser type retenue par le protecteur et de soutien dans la séquence vidéo.
 10. Sur certains véhicules, il peut-être nécessaire d'ajuster les butées du capot et (ou) la fermeture du capot pour obtenir un bon dégagement. **IMPORTANT: Ne jamais se servir du protecteur pour ouvrir ou fermer le capot.**

INSTRUCTIONS POUR L'ENTRETIEN

Nettoyez le protecteur avec une solution d'eau et de savon doux ou avec un nettoyant de plastique seulement. Ne pas utiliser de produits chimiques ou de dissolvant. S'assurer périodiquement que les butées sont toujours en place et que le protecteur est toujours bien retenu. Évitez de laver le véhicule dans les laves-autos automatiques.

ILLUSTRATION N°1 – EMPLACEMENT DES BUTÉES

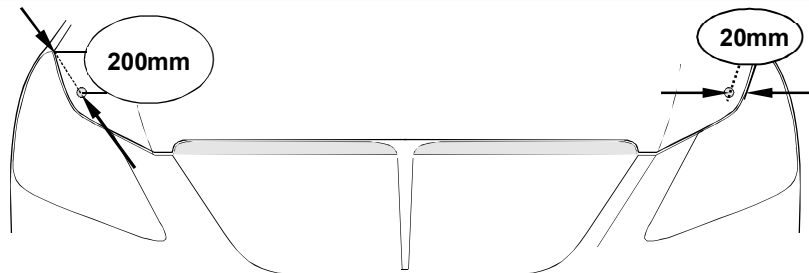


ILLUSTRATION N°2 – EMPLACEMENT DES PIÉDESTAUX

