

Installation Instructions

Hardware Kit

- 5 . Large Bumpons
- 1 . 35+x 3/8+Roll Gasket
- 4 . Clip Bodies
- 4 . Pins
- 4 . # 6 x 5/8+Truss Head Screws
- 4 . L Brackets
- 4 . 3M Anti-abrasion Film Pads

Tools Required

- 1 . Phillips Screwdriver
- 1 . Tape Measure



1. Be sure that hood is clean and dry inside and out. Open the hood.
2. Install the bumpons as shown in *illustration #1*. **Note: The bumpons must be installed on the hood not on the protector!!!** If the bumpons are installed on the protector, they will wear through the paint.
3. Peel the protective backing from the roll of gasket material and attach to the leading edge of the hood as shown in *illustration #1*.
4. Center the protector on the hood, resting on the bumpons. Peel and fold an anti-abrasion film pad in half over the edge of the hood, underneath the two (2) inner holes in the protector. See *Illustrations #1 & #2 – Step 4*.
5. a) Place a clip over each of the anti-abrasion film pads on the edge of the hood as shown in *Illustration #2 – Step 5a*.
 b) Insert a pin through the protector into each of the clips. See *Illustration #3 – Step 5b*.
 c) Insert the #6 x 5/8 screw through an L bracket and into the clip. See *Illustration #2 – Steps 5c & 5d*.
 d) Make sure all the components are well seated together; the protector is centered on the hood, and then tighten the screws into the clips.
6. **Repeat steps #4 and #5 for the other two (2) holes.**
7. On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.
Note: Do not pull on the protector when opening or closing the hood.

Care Instructions

Clean the protector with mild soap and water or plastic cleaner only. Do not use chemicals or solvents. Periodically check to make sure that the bumpons are in place and the protector is secure. Avoid using automatic car washes. Do not pull on the protector when opening, or closing the hood.

Illustration #1: Bumpon and Clip Location


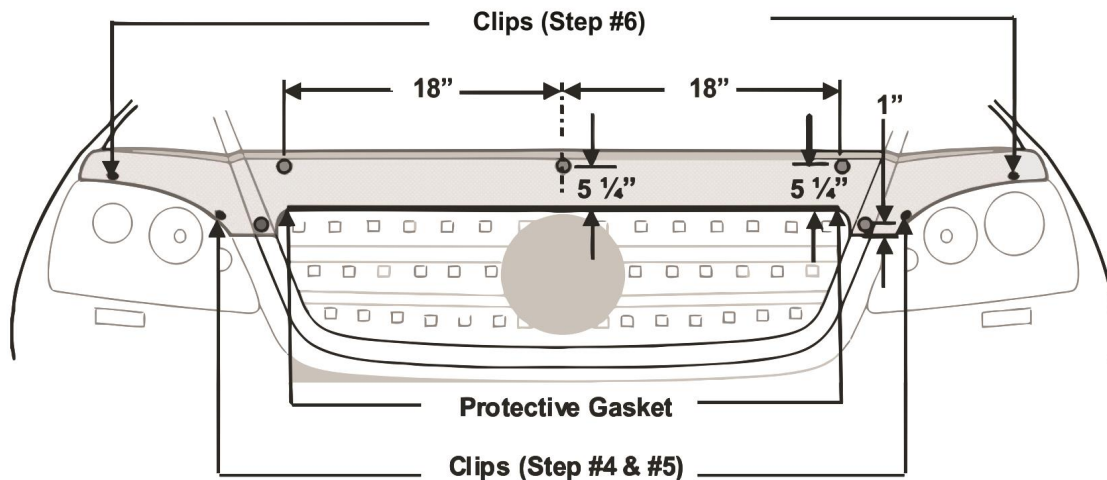


Illustration #2: Clip Configuration – Patent No. 6,892,427

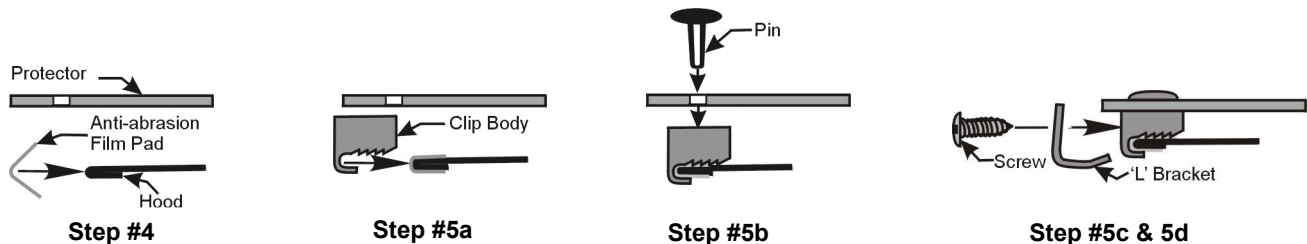

Thank you for purchasing a FORM FIT hood protector. Retain this sheet for care instructions and kit information.