

INSTALLATION INSTRUCTIONS

NISSAN ALTIMA 1998 - 2001

1308

HARDWARE KIT

- 1 – Rubber Wellnut Assembly
- 1 – 5/16 Plated Bolt
- 1 – 5/16 Flat Washer
- 1 – Alcohol Wiping Pad
- 2 – 3M Anti-abrasion Film Pads
- 2 – Large Bumpons
- 2 – Small Bumpons
- 2 – Black 'E' clips – See supplemental instruction "Installing Black 'E' Clips onto Deflector"
- 2 – 6" Strips of 2 Side Tape – already attached to the deflector

TOOLS REQUIRED

- 1 – 1/2" Wrench or Socket
- 1 – Grease Pencil



INSTALLATION

1. Be sure that hood is clean and dry inside and out.
2. Install the rubber bumpons on the hood. Place the large bumpons 2" in from sides of hood and 2" back from leading edge. Place the small bumpons centered on the lower projections of the hood. **Attention: The bumpons must be installed on the hood not on the deflector!!!!** If the bumpons are installed on the deflector they will wear through the paint. See Figure #2.
3. Center the deflector on the hood to determine where the deflector will mount. The center hole in the deflector aligns with an existing hole in the hood. Before removing the protective backing from the two-sided tape on the deflector, use tape or a grease pencil to make reference points to aid with the installation of the deflector in following steps.
4. Use the alcohol-wiping pad (supplied in installation kit) to clean the area where the two-sided tape (already installed on deflector) contacts the underside of the hood.
5. Remove the protective backing from the two-sided tape and install the deflector using the alignment marks made in step three. Be sure the deflector and the tape are fully seated against the hood.
6. Install the rubber wellnut through the deflector into existing hole in the hood. Be sure the wellnut is fully seated.
7. Place the flat washer on the bolt and tighten into the wellnut using a 1/2" wrench or socket. **Do not over tighten.** See Figure #1.
8. Install the anti-abrasion film pad directly under where the 'E' clips (already attached to the deflector) will fit on hood. Be sure to wrap the pads over the leading edge of the hood to cover at least 1/2" of the bottom of the hood.
9. Install the 'E' clips by gently pulling the deflector wings towards the leading edge of the hood until they slide over and clip onto the hood. It may be necessary to tap on the clips to fully seat them against the hood.
10. On some vehicles it may be necessary to adjust hood bumpers and/or latch for proper clearance.

Note: Do not pull on the deflector when opening or closing the hood.

CARE INSTRUCTIONS

Clean the deflector with a mild soap and water solution or plastic cleaner only. Do not use chemicals or solvents.

Periodically check to make sure the bumpons are in place and the deflector is secure. Avoid using automatic car washes. Do not pull on the deflector when opening or closing the hood.

Figure #1: HARDWARE ASSEMBLY


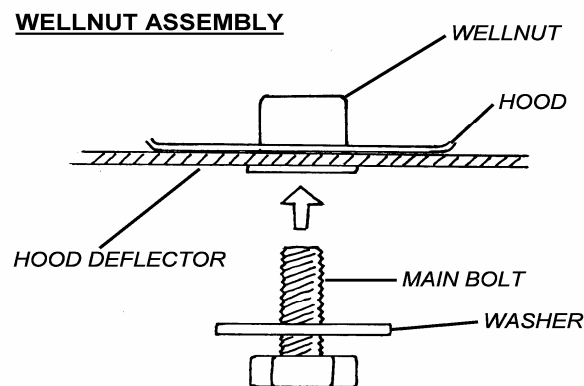


Figure #2: BUMPON LOCATION

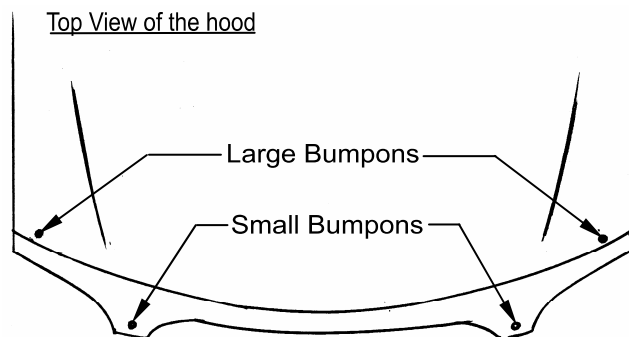

Thank you for purchasing a **FORM FIT** hood deflector.
Retain this sheet for care instructions hardware kit and information.

Rev5.070911

INSTRUCTIONS D'ASSEMBLAGE

NISSAN ALTIMA 1998 - 2001

1308

Sachet de fixations

- 1 – Écrou-douille en caoutchouc
- 1 – Boulon plaqué de 5/16
- 1 – Rondelle plate de 5/16
- 1 – Tampon imbibé d'alcool
- 2 – Tampons anti-abrasifs 3M
- 2 – Grosses butées
- 2 – Petites butées
- 2 – Agrafes noires « E » - Voir l'instruction supplémentaire « installer le noir E' agrafes sur le déflecteur »
- 2 – Morceaux du ruban à deux côtés de 6 po. - déjà fixées au déflecteur

Outils requis

- 1 – Clé ou douille de ½ po.
- 1 – Crayon gras



Installation

1. S'assurer que le capot est propre et sec à l'intérieur comme l'extérieur.
2. Installer les butées sur le capot. Installer les grosses butées à 2 pouces de chaque côté du capot et à 2 pouces du bord avant. Centrer les petites butées sur les saillies inférieures du capot. **Attention: Les butées doivent être posées sur le capot et non sur le déflecteur!!!!** Si les butées sont installées sur le déflecteur, elles useront la peinture. Voir l'illustration n° 1.
3. Centrer le déflecteur sur le capot pour déterminer où il sera installé. Le trou du centre du déflecteur s'aligne avec le trou existant du capot. Avant d'enlever la pellicule de protection du ruban à deux côtés du déflecteur. Utiliser du ruban ou un crayon gras pour marquer les points de référence afin de faciliter l'installation du déflecteur lors des opérations suivantes.
4. Utiliser le tampon imbibé d'alcool (fourni dans le sachet d'installation) pour nettoyer la zone où le ruban à deux côtés (déjà fixé sur le déflecteur) viendra en contact avec le dessous du capot.
5. Enlever la pellicule de protection du ruban à deux côtés, puis installer le déflecteur en se servant des repères d'alignement faits lors de l'opération 3. S'assurer que le déflecteur et le ruban reposent bien contre le capot.
6. Installer l'écrou douille en caoutchouc dans le déflecteur et dans le trou existant du capot. S'assurer que l'écrou est bien fixé.
7. Installer la rondelle plate sur le boulon, puis visser le boulon dans l'écrou douille à l'aide d'une clé ou d'une douille de ½ pouce. **Ne pas trop serrer.** Voir l'illustration n° 1.
8. Installer un tampon anti-abrasif directement sous les agrafes « E » qui vont se fixer au capot. S'assurer de bien envelopper les tampons sur la bordure avant du capot pour couvrir au moins ½ po. en-dessous du capot.
9. Installer les agrafes « E » en tirant prudemment les ailes du déflecteur vers le bord avant du capot, jusqu'à ce qu'elles glissent et s'agrafe sur le bord du capot.
10. Sur certains véhicules, il peut-être nécessaire d'ajuster les butées du capot et/ ou la fermeture du capot pour obtenir un bon dégagement.

Important: Ne pas tirer sur le déflecteur pour ouvrir ou fermer le capot.

Instructions pour l'entretien

Nettoyer le déflecteur avec une solution faite d'eau et de savon doux ou avec un nettoyant de plastique seulement. Ne pas utiliser de produits chimiques ou de dissolvants. S'assurer périodiquement que les butées sont toujours en place et que le déflecteur est toujours bien retenu. **Éviter de laver le véhicule dans un lave-auto automatique.** Ne pas tirer sur le déflecteur pour ouvrir ou fermer le capot.

Illustration n° 1 : Assemblage

Assemblage de l'écrou-douille


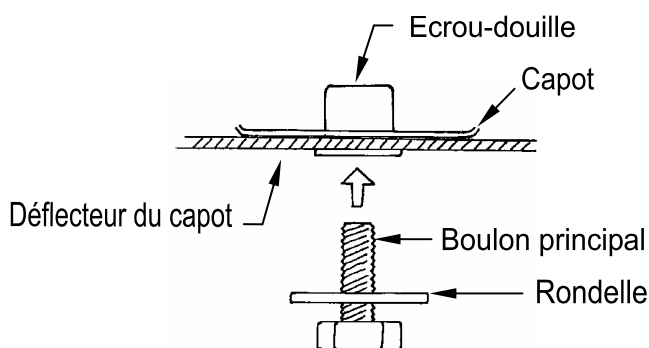


Illustration n° 2 : Emplacement des butées

Vu de haut du capot

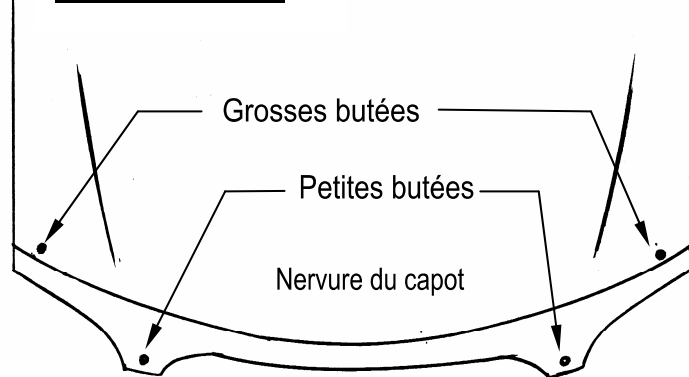

Merci de vous êtes procuré un déflecteur **FORM FIL**.

Conserver cette feuille pour les instructions d'entretien et les renseignements concernant le nécessaire d'installation.

Fabriqué au Canada

Rev5.070911