

FORM FIT HOOD PROTECTOR

Nissan Xterra 2005 -

HDW 13J 05

Thank you for purchasing a **FORM FIT** hood protector.

Care Instructions

- Clean the protector with a mild soap and water solution or plastic cleaner only.
- Periodically check to make sure all the hardware is in place and the protector is secure.

Attention!




Do not use chemicals or solvents. Avoid using automatic car washes. Do not pull on the protector when opening or closing the hood.

Hardware Kit



Tools Required



Installation Instruction

1. Be sure that the hood is clean and dry inside and out. Open the hood of the vehicle.
2. Install the bumpers as shown in *illustration #1*. **Attention: The bumpers must be installed on the hood not on the protector!!!** If the bumpers is installed on the protector, it will wear through the paint.
3. Open the hood. The four (4) holes in the protector will align with the holes on the underside of the hood. Push a plastic expansion plug through each of the holes in the protector and into the corresponding holes in the hood. See *Illustration #2*. It will be necessary to hold the expansion plugs in the holes with your thumb while, inserting and tightening the screws.
4. Make sure the protector is centered. Attach the anti-abrasion film pads to the hood in line with the holes in the leading edge of the protector. Fold the pads in half over the hood edge to cover at least 1/2" of the underside of the hood. See *Illustration #3*.
5. Slide the "C" clips on the hood in line with the holes in the protector. Be sure that the "C" clips are well seated against the hood; it may be necessary to tap on the clips. See *Illustration #3*.
6. Be sure that the hole in the top of the clips lines up with the hole in the protector, then tighten the #6 x 3/8" screws, through the protector and into the top of the "C" clips. **Do not over tighten.** See *Illustration #3*.
7. Make sure all the clips are well seated against the hood. Tighten the #4 x 3/16" screws in the back of the "C" clips. See *Illustration #3*.
8. On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.

Note: Do not pull on the protector when opening or closing the hood.

Illustration #1 : Bumper Location

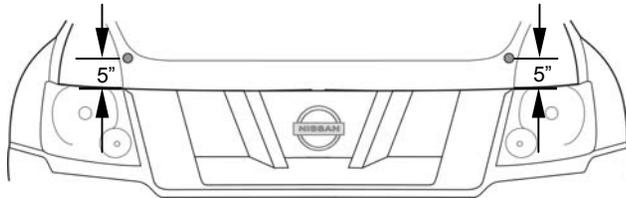


Illustration #2 : Hardware Installation


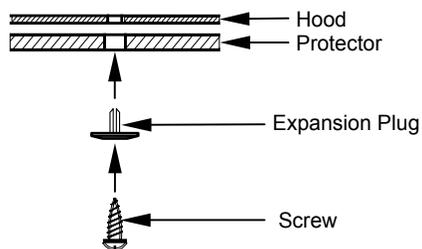


Illustration #3 : Clip Configuration

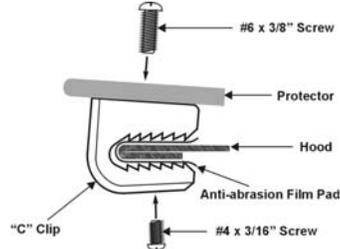

FORM FIT HOOD PROTECTOR

Nissan Xterra 2005 -

HDW 13J 05

Thank you for purchasing a **FORM FIT** hood protector.

Care Instructions

- Clean the protector with a mild soap and water solution or plastic cleaner only.
- Periodically check to make sure all the hardware is in place and the protector is secure.

Attention!




Do not use chemicals or solvents. Avoid using automatic car washes. Do not pull on the protector when opening or closing the hood.

Hardware Kit



Tools Required



Installation Instruction

1. Be sure that the hood is clean and dry inside and out. Open the hood of the vehicle.
2. Install the bumpers as shown in *illustration #1*. **Attention: The bumpers must be installed on the hood not on the protector!!!** If the bumpers is installed on the protector, it will wear through the paint.
3. Open the hood. The four (4) holes in the protector will align with the holes on the underside of the hood. Push a plastic expansion plug through each of the holes in the protector and into the corresponding holes in the hood. See *Illustration #2*. It will be necessary to hold the expansion plugs in the holes with your thumb while, inserting and tightening the screws.
4. Make sure the protector is centered. Attach the anti-abrasion film pads to the hood in line with the holes in the leading edge of the protector. Fold the pads in half over the hood edge to cover at least 1/2" of the underside of the hood. See *Illustration #3*.
5. Slide the "C" clips on the hood in line with the holes in the protector. Be sure that the "C" clips are well seated against the hood; it may be necessary to tap on the clips. See *Illustration #3*.
6. Be sure that the hole in the top of the clips lines up with the hole in the protector, then tighten the #6 x 3/8" screws, through the protector and into the top of the "C" clips. **Do not over tighten.** See *Illustration #3*.
7. Make sure all the clips are well seated against the hood. Tighten the #4 x 3/16" screws in the back of the "C" clips. See *Illustration #3*.
8. On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.

Note: Do not pull on the protector when opening or closing the hood.

Illustration #1 : Bumper Location

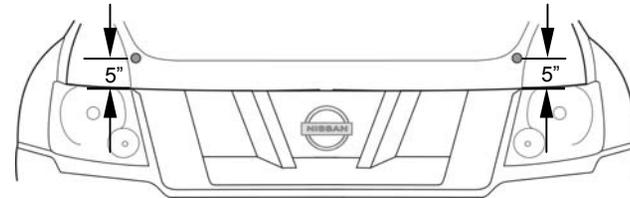


Illustration #2 : Hardware Installation

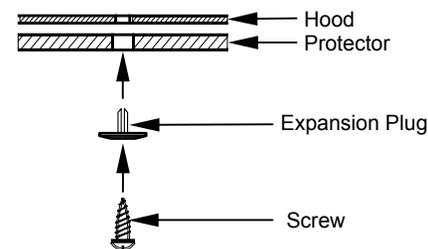


Illustration #3 : Clip Configuration

