

FORM FIT INSTALLATION INSTRUCTIONS

JEEP GRAND CHEROKEE 1999 - 2004

HDW 1779

HARDWARE KIT

- 1 – Alcohol Wiping Pad
- 2 – C-322 Clips
- 3 – Large Bumpons
- 2 – 3M Anti-abrasion Film Pads
- 2 – Black 'E' clips – See supplemental instruction "Installing Black 'E' Clips onto Deflector"

TOOLS REQUIRED

- 1 – Grease Pencil



INSTALLATION

1. Be sure that hood is clean and dry inside and out. Installation must be done above 10° Celsius or 50° Fahrenheit for the tape to develop best adhesion.
2. Open the hood and 'dry' fit the deflector on it. Do not remove the protective backing from the adhesive tape mounted on the deflector yet. Center the deflector on the hood, making sure that the clips at the wings of the deflector are resting on top of the hood.
3. Using tape, chalk or a grease pencil, make reference marks on the underside of the hood to mark the tab and clip locations for final installation.
4. Install the anti-abrasion film pad over the edge of the hood at the locations where the 'E' clips will fit on the hood. Be sure to wrap the pads over the edge to cover approx ½" underneath.
5. Slide the deflector aside and clean all the areas on the underside of hood where the adhesive tape will contact the hood with the alcohol-wiping pad provided.
6. Remove the protective backing from the adhesive tape. Be careful to keep the tape from touching the underside of the hood, until the deflector is centered and the 'E' clips are mounted. Using the reference marks established in step 3, push the 'E' clips over the hood edge onto the anti-abrasion pads installed in step 4.
7. Again, make sure that the deflector is centered on the hood and the reference marks then firmly press the double-sided tape into the underside of the hood.
8. Install the metal retaining clips in the two oval holes location as detailed in Figure below. Be sure to install the C-322 clips so that the retaining teeth are seated against the hood and not the deflector. *See Figure #1.* Be sure that the C-322 clips are fully seated.
9. Attach the bumpons to the hood, under the flip, as shown below. **Attention: The bumpons must be installed on the hood not the deflector!!!!** If the bumpons are installed on the deflector they will wear through the paint.
10. On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.
It is imperative that the adhesive be allowed to set up for 24 hours before use.


Note: Do not pull on the deflector when opening or closing the hood.

CARE INSTRUCTIONS

Clean the deflector with a mild soap and water solution or plastic cleaner only. Do not use chemicals or solvents. Periodically check to make sure the bumpons are in place and the deflector is secure.

Avoid using automatic car washes. Do not pull on the deflector when opening or closing the hood.

Figure #1: BUMPON LOCATION

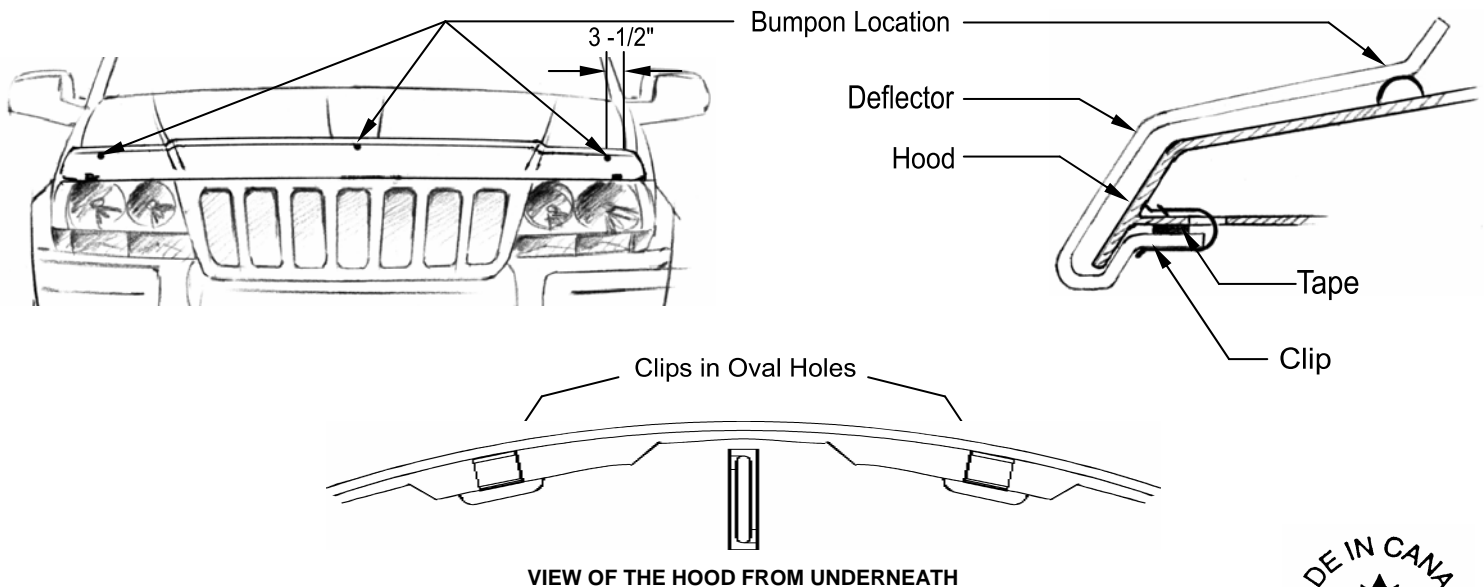

Thank you for purchasing a **FORM FIT** hood deflector.
Retain sheet for care instructions and kit information.



Rev7.070911

FORM FIT INSTRUCTIONS D'ASSEMBLAGE

JEEP GRAND CHEROKEE 1999 - 2004

HDW 1779

Sachet de fixations

- 1 – Tampon imbibé d'alcool
- 2 – Agrafes C-322
- 3 – Grosses butées
- 2 – Tampons anti-abrasifs 3M
- 2 – Agrafes noires « E » – Voir l'instruction supplémentaire « installer le noir E' agrafes sur le déflecteur »

Outils requis

- 1 – Crayon gras



Installation

1. S'assurer que le capot est propre et sec à l'intérieur comme à l'extérieur. L'installation doit se faire au-dessus de 10° Celsius ou 50° Fahrenheit.
2. Ouvrir le capot et installer le déflecteur sur celui-ci. Ne pas enlever immédiatement la bande protectrice du ruban adhésif qui est fixé au déflecteur. Centrer le déflecteur sur le capot et s'assurer que les agrafes sur les ailes du déflecteur restent sur le haut du capot.
3. En utilisant un ruban, une craie ou un crayon gras faire des marques de références sur le dessous du capot pour marquer la languette et le positionnement des agrafes pour l'installation finale.
4. Installer un tampon anti-abrasif directement derrière chaque agrafe « E » qui vont se fixer au capot. S'assurer d'envelopper les tampons au bord avant du capot pour couvrir au moins ½ pouce en dessous du capot.
5. Glisser le déflecteur sur le côté et nettoyer avec un tampon imbibé d'alcool les endroits où le ruban adhésif va être en contact avec le capot.
6. Enlever la bande protectrice du ruban adhésif. Garder le ruban hors d'atteinte du dessous du capot jusqu'à ce que le déflecteur soit centré et les agrafes fixées. En utilisant les marques de références faites à l'étape 3, pousser sur les agrafes « E » au-dessus de la bordure du capot sur les tampons anti-abrasifs à l'étape 4.
7. S'assurer de nouveau que le déflecteur et les marques de références soient bien centrés puis presser fermement le côté double du ruban à l'intérieur du capot.
8. Installer les agrafes de retenues en métal dans les trous ovales tel qu'indiqué à l'illustration ci-dessous. S'assurer d'installer les agrafes C-322 pour que les dents de retenues soient fixées contre le capot et non pas sur le déflecteur. Voir l'illustration n° 1. S'assurer que les agrafes C-322 sont tous bien installées.
9. Attacher les butées au capot tel qu'indiqué ci-dessous. **Attention: Les butées doivent être posées sur le capot et non sur le déflecteur !!** Si les butées sont installées sur le déflecteur, elles useront la peinture.
10. Sur certains véhicules, il peut-être nécessaire d'ajuster les butées du capot et (ou) la fermeture du capot pour obtenir un bon dégagement.


Avant l'utilisation, il est indispensable de laisser 24 heures pour permettre à l'adhésion de se solidifier.

Important: Ne jamais se servir du déflecteur pour ouvrir ou fermer le capot.

Instructions pour l'entretien

Nettoyer le déflecteur avec une solution faite d'eau et de savon doux ou avec un nettoyant de plastique seulement. Ne pas utiliser de produits chimiques ou de dissolvants. S'assurer périodiquement que les butées sont toujours en place et que le déflecteur est toujours bien retenu. **Éviter de laver le véhicule dans les laves-autos automatiques.** Ne pas tirer sur le déflecteur pour ouvrir ou fermer le capot.

Illustration n° 1 : Emplacement des butées et des agrafes C-322

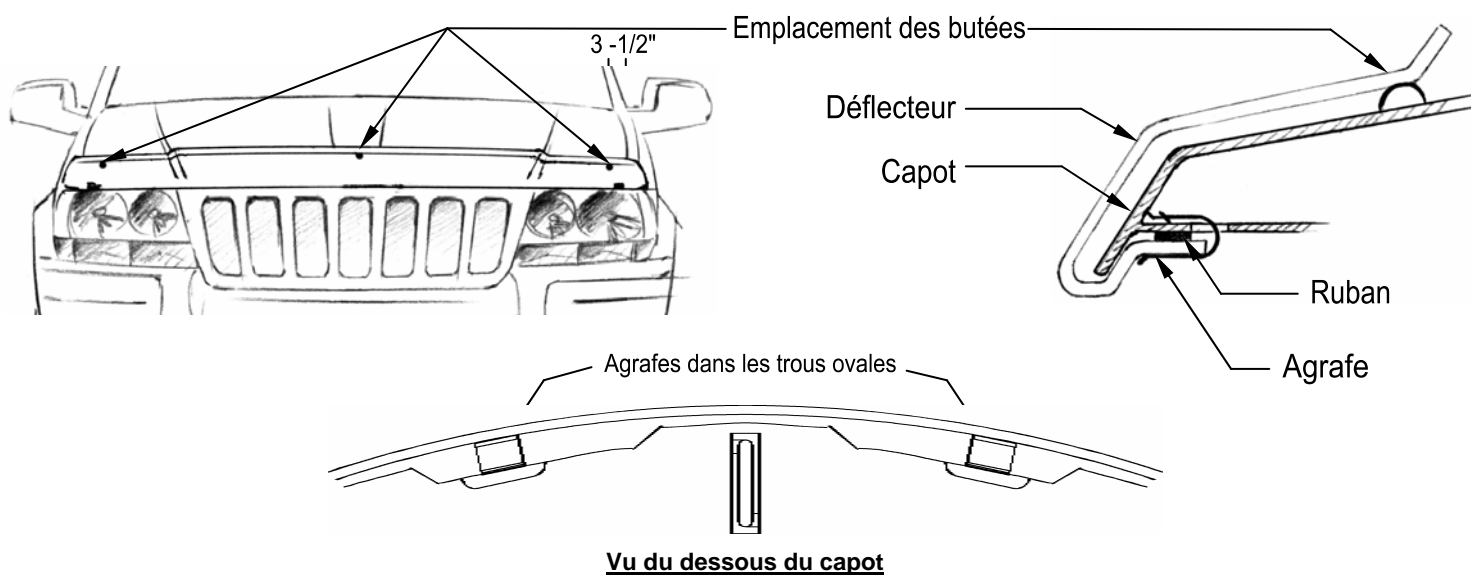

Merci de vous être procuré un déflecteur **FORM FIT**. Conserver cette feuille pour les instructions d'entretien et les renseignements concernant le nécessaire d'installation.

Fabriqué au Canada

Rev7.070911