

FORM FIT HOOD PROTECTOR

Kia Sorento 2003 -

HDW 22G 03

Thank you for purchasing a **FORM FIT** hood protector.

Care Instructions


- Clean the protector with a mild soap and water solution or plastic cleaner only.
- Periodically check to make sure all the hardware is in place and the protector is secure.

Attention!




Do not use chemicals or solvents. Avoid using automatic car washes. Do not pull on the protector when opening or closing the hood.

Hardware Kit



Tools Required



Installation Instruction

1. Be sure that the hood is clean and dry inside and out. Open the hood of the vehicle.
2. Install the bumpers as shown in Illustration #1. **Attention: The bumpers must be installed on the hood not the protector!!!!** If the bumpers are installed on the protector, they will wear through the paint.
3. Peel and fold the anti-abrasion film pads in half over the leading edge of the hood underneath each of the holes in the protector. See Illustration # 2.
4. Push a "C" clip over each of the anti-abrasion film pads on the edge of the hood. Tighten a # 6 x 3/8" screw through the protector and into each of the clips – **Note: The screws will tighten quickly – do not over tighten.** See Illustration # 2.
5. Make sure the "C" clips are all fully seated and the protector is centred then tighten a # 4 x 3/16" screw into the bottom of each of the "C" clips. **Do not over tighten the screws.** See Illustration # 2.
6. On some vehicles it may be necessary to adjust hood bumpers and/or latch for proper clearance. **Note: Do not pull on the protector when opening or closing the hood.**

Illustration # 1: Bumper Location


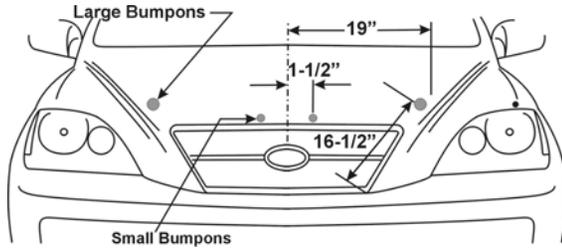


Illustration # 2: Clip Location & Configuration

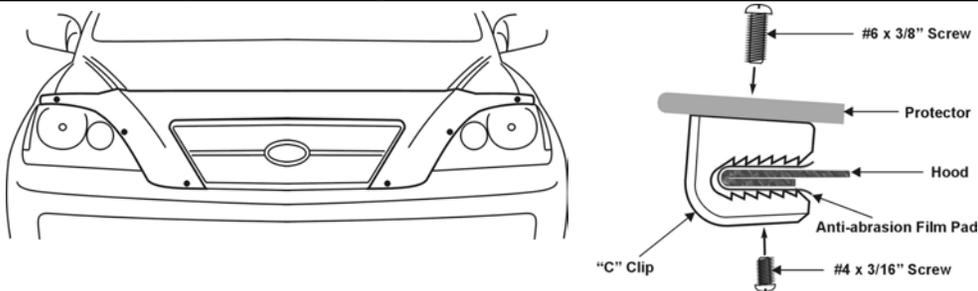

FORM FIT HOOD PROTECTOR

Kia Sorento 2003 -

HDW 22G 03

Thank you for purchasing a **FORM FIT** hood protector.

Care Instructions


- Clean the protector with a mild soap and water solution or plastic cleaner only.
- Periodically check to make sure all the hardware is in place and the protector is secure.

Attention!




Do not use chemicals or solvents. Avoid using automatic car washes. Do not pull on the protector when opening or closing the hood.

Hardware Kit



Tools Required



Installation Instruction

1. Be sure that the hood is clean and dry inside and out. Open the hood of the vehicle.
2. Install the bumpers as shown in Illustration #1. **Attention: The bumpers must be installed on the hood not the protector!!!!** If the bumpers are installed on the protector, they will wear through the paint.
3. Peel and fold the anti-abrasion film pads in half over the leading edge of the hood underneath each of the holes in the protector. See Illustration # 2.
4. Push a "C" clip over each of the anti-abrasion film pads on the edge of the hood. Tighten a # 6 x 3/8" screw through the protector and into each of the clips – **Note: The screws will tighten quickly – do not over tighten.** See Illustration # 2.
5. Make sure the "C" clips are all fully seated and the protector is centred then tighten a # 4 x 3/16" screw into the bottom of each of the "C" clips. **Do not over tighten the screws.** See Illustration # 2.
6. On some vehicles it may be necessary to adjust hood bumpers and/or latch for proper clearance. **Note: Do not pull on the protector when opening or closing the hood.**

Illustration # 1: Bumper Location

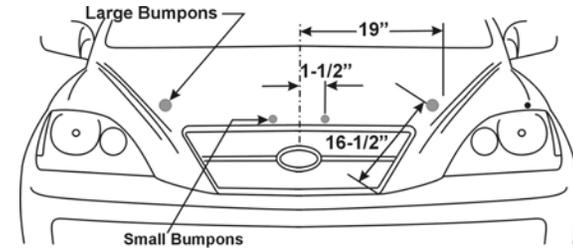


Illustration # 2: Clip Location & Configuration

