

FORM FIT HOOD PROTECTOR

Ford Expedition 2003 -

HDW 8A 03

Thank you for purchasing a **FORM FIT** hood protector.


Care Instructions

- Clean the protector with a mild soap and water solution or plastic cleaner only.
- Periodically check to make sure the bumpons are in place and the protector is secure.


Attention!



Do not use chemicals or solvents. Avoid using automatic car washes. Do not pull on the protector when opening or closing the hood.



Tools Required



#2

Installation Instruction

1. Open the hood. Be sure that the hood is clean and dry inside and out.
2. Center the protector on the hood to familiarize yourself with the mounting holes locations.
3. Insert the expansion plugs through the holes in the protector into the holes in the hood. Be sure that the protector is well seated against the hood and then insert and tighten the screws into the expansion plugs. *See Illustration # 1.*
4. Insert the screws into the expansion plugs. Adjust the protector for best fit then, tighten the screws into the expansion plugs (**do not over tighten**). *See Illustration #1*
5. Install the (2) two bumpons as shown in *Illustration #2*. **Attention: The bumpons must be installed on the hood not the protector!!!!** If the bumpons are installed on the protector, they will wear through the paint.
6. On some vehicles it may be necessary to adjust the hood bumpons and/or latch for proper clearance.

Note: Do not pull on the protector when opening or closing the hood.

Illustration #1 : Hardware Assembly


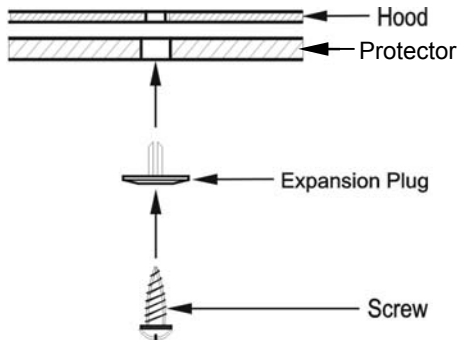


Illustration # 2 : Bumpon Placement

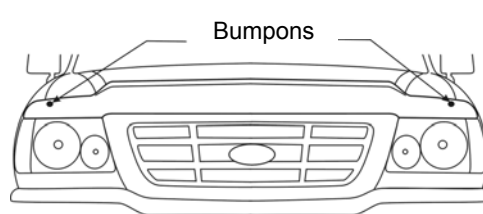

FORM FIT HOOD PROTECTOR

Ford Expedition 2003 -

HDW 8A 03

Thank you for purchasing a **FORM FIT** hood protector.


Care Instructions

- Clean the protector with a mild soap and water solution or plastic cleaner only.
- Periodically check to make sure the bumpons are in place and the protector is secure.


Attention!



Do not use chemicals or solvents. Avoid using automatic car washes. Do not pull on the protector when opening or closing the hood.



Tools Required



#2

Installation Instruction

1. Open the hood. Be sure that the hood is clean and dry inside and out.
2. Center the protector on the hood to familiarize yourself with the mounting holes locations.
3. Insert the expansion plugs through the holes in the protector into the holes in the hood. Be sure that the protector is well seated against the hood and then insert and tighten the screws into the expansion plugs. *See Illustration # 1.*
4. Insert the screws into the expansion plugs. Adjust the protector for best fit then, tighten the screws into the expansion plugs (**do not over tighten**). *See Illustration #1*
5. Install the (2) two bumpons as shown in *Illustration #2*. **Attention: The bumpons must be installed on the hood not the protector!!!!** If the bumpons are installed on the protector, they will wear through the paint.
6. On some vehicles it may be necessary to adjust the hood bumpons and/or latch for proper clearance.

Note: Do not pull on the protector when opening or closing the hood.

Illustration #1 : Hardware Assembly


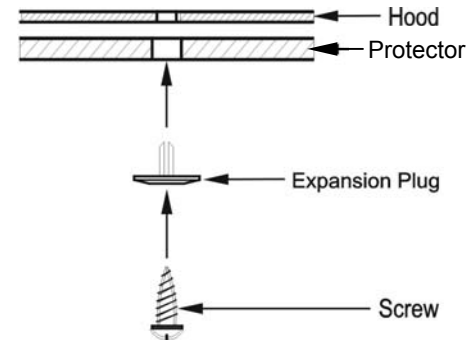


Illustration # 2 : Bumpon Placement

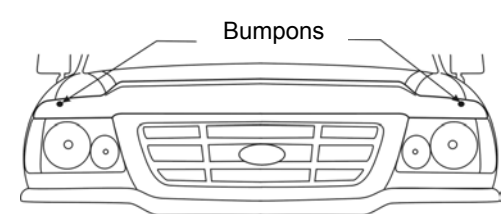

FORM FIT Protecteur de capot

Ford Expedition 2003 -

HDW 8A 03

Merci de vous être procuré un protecteur de capot **FORM FIT**.

Instruction pour l'entretien


- Nettoyer le protecteur avec une solution faite d'eau et de savon doux ou avec un nettoyant de plastique seulement.
- S'assurer périodiquement que les butées sont toujours en place et que le protecteur est toujours bien retenu.

Attention!



Ne pas utiliser de produits chimiques ou de dissolvants. Éviter de laver le véhicule dans un lave-auto automatique. Ne pas tirer sur le protecteur pour ouvrir ou fermer le capot.

Sachet de fixation



Outils nécessaires



#2

Instruction d'assemblage

- Ouvrir le capot. S'assurer que le capot est propre et sec à l'intérieur comme à l'extérieur.
- Positionner le protecteur sur le capot pour vous familiarisez avec les trous de montage.
- Introduire les bouchons expansibles dans les trous du protecteur et du capot. S'assurer que le protecteur repose bien contre le capot, puis introduire les vis dans les bouchons expansibles et les serrer. Voir l'illustration n° 1.
- Puis introduire les vis dans les bouchons expansibles et les serrer. Voir l'illustration n° 2.
- Installer les deux (2) butées tel qu'indiqué à l'illustration n° 2. **Attention: Les butées doivent être installées sur le capot et non sur le protecteur!!!!** Si les butées sont installées sur le protecteur, elles useront la peinture.
- Sur certains véhicules, il peut-être nécessaire d'ajuster les butées du capot et (ou) la fermeture du capot pour obtenir un bon dégagement.

Important: Ne jamais se servir du protecteur pour ouvrir ou fermer le capot.

Illustration #1 : Assemblage


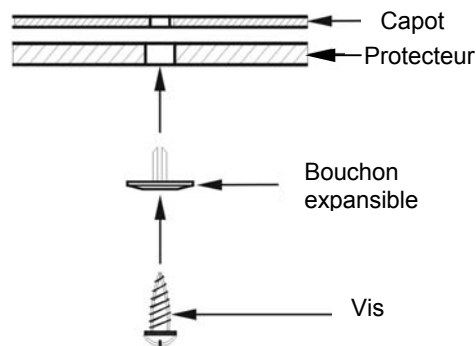


Illustration #2 : Emplacement des butées

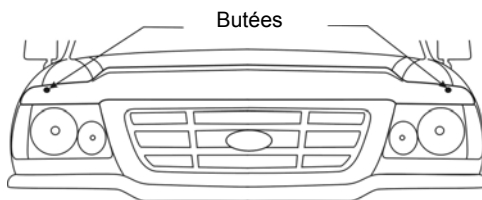

FORM FIT Protecteur de capot

Ford Expedition 2003 -

HDW 8A 03

Merci de vous être procuré un protecteur de capot **FORM FIT**.

Instruction pour l'entretien


- Nettoyer le protecteur avec une solution faite d'eau et de savon doux ou avec un nettoyant de plastique seulement.
- S'assurer périodiquement que les butées sont toujours en place et que le protecteur est toujours bien retenu.

Attention!




Ne pas utiliser de produits chimiques ou de dissolvants. Éviter de laver le véhicule dans un lave-auto automatique. Ne pas tirer sur le protecteur pour ouvrir ou fermer le capot.

Sachet de fixation



Outils nécessaires



#2

Instruction d'assemblage

- Ouvrir le capot. S'assurer que le capot est propre et sec à l'intérieur comme à l'extérieur.
- Positionner le protecteur sur le capot pour vous familiarisez avec les trous de montage.
- Introduire les bouchons expansibles dans les trous du protecteur et du capot. S'assurer que le protecteur repose bien contre le capot, puis introduire les vis dans les bouchons expansibles et les serrer. Voir l'illustration n° 1.
- Puis introduire les vis dans les bouchons expansibles et les serrer. Voir l'illustration n° 2.
- Installer les deux (2) butées tel qu'indiqué à l'illustration n° 2. **Attention: Les butées doivent être installées sur le capot et non sur le protecteur!!!!** Si les butées sont installées sur le protecteur, elles useront la peinture.
- Sur certains véhicules, il peut-être nécessaire d'ajuster les butées du capot et (ou) la fermeture du capot pour obtenir un bon dégagement.

Important: Ne jamais se servir du protecteur pour ouvrir ou fermer le capot.

Illustration #1 : Assemblage

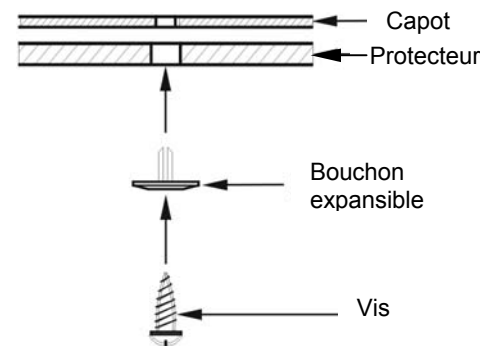


Illustration #2 : Emplacement des butées

