

# Installation Instructions

|                                       |                |             |             |
|---------------------------------------|----------------|-------------|-------------|
|                                       | HYUNDAI ACCENT | 2000 – 2001 | SD 10D 00-2 |
| <b>2 Piece-Side Window Deflectors</b> | HYUNDAI ACCENT | 2002 –      | SD 10D 02-2 |

## HARDWARE KIT

- 3M Double-sided Body Moulding Tape
  - already applied to the deflector
- 1 – 3M Adhesive Promoter
- 1 – Alcohol Wiping Pad

## TOOLS REQUIRED

None


**Attention:** This product uses a 3M adhesive product that requires installation and curing temperatures of at least 20°C/ 70°F for 24 hours to develop maximum adhesion to the surface. **Failure to install this product at the proper temperature or allow adequate curing time before use is not covered under warranty.**

1. The deflector mounts to the window frame. Make sure that those areas are clean and dry.
2. **Start** with the Driver's side of the car.
3. To understand how the deflector will fit, place the Driver's deflector up to the car. **Start** by butting the front end of the side window deflector into the rear view mirror mount. The top edge of the deflector runs flush along the top edge of the window frame. The trailing end aligns with the back edge of the window frame.
4. Prime the contact area on the window frame with the adhesive promoter. Allow to dry. *Follow the instructions on the promoter for use.*
5. Again starting with the front end, to peel the protective backing from the tape and press the deflector into place as determined in step 3.
6. Once the deflector is in place press down **hard** along the entire flange area to make sure that the tape is fully adhered to the vehicle.
7. Repeat from step 3-6 for the Passenger's side.
8. Remove any residue of the adhesion promoter with the alcohol wiping pad.

## CARE INSTRUCTIONS

**Clean the deflectors with a mild soap and water solution or plastic cleaner only. Do not use chemicals or solvents.** Periodically check to make sure the deflectors are secure. **Avoid using automatic car washes.**

## ILLUSTRATION – SIDE VIEW, ALIGNMENT

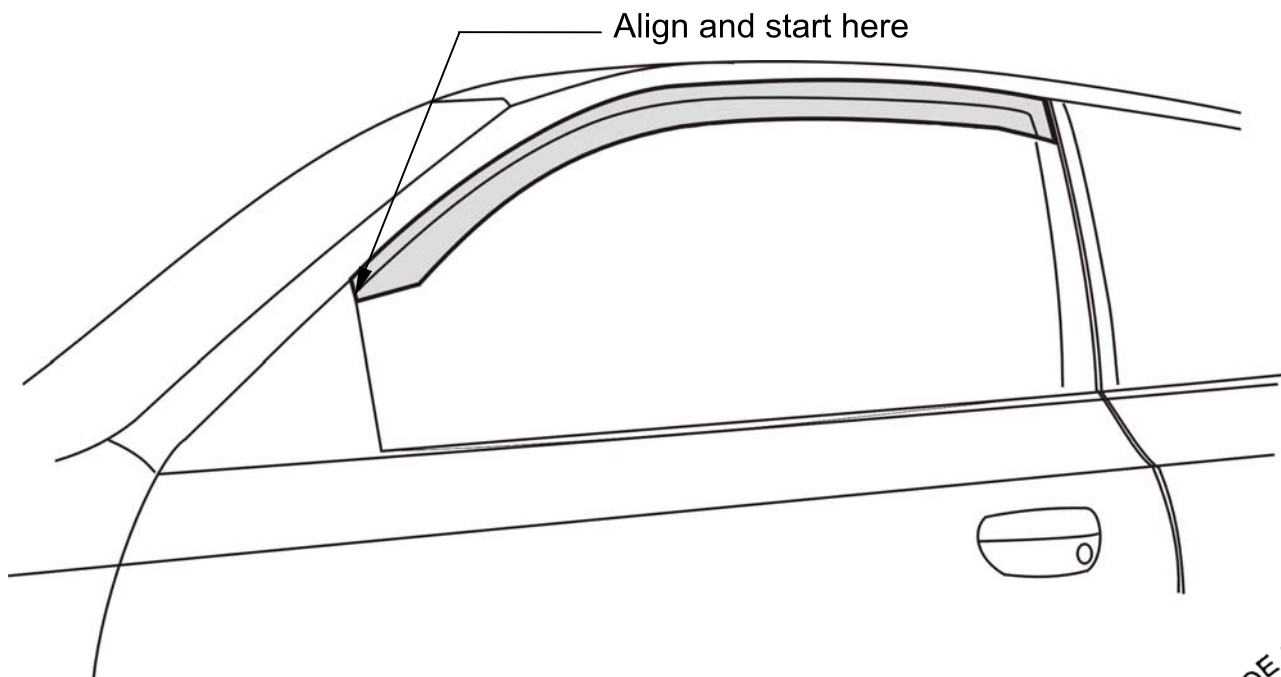

Thank you for purchasing a Focus Side Window Deflector. Retain this sheet for care instructions and kit information.



Rev4.030325