

## Installation Instructions

## Nissan Titan XD 2016-up

### HARDWARE KIT


2 – Automotive surface cleaner

### TOOLS REQUIRED


Paper towel or clean cloth  
Measuring tape

**Attention:** This product uses a 3M adhesive that requires installation and curing temperatures of at least 15° to 43°c (60 to 110F) for 1 hour to develop maximum adhesion to the surface. The surface must be clean and free of contaminants. **Failure to properly prepare the surface or failure to install this product at the proper temperature or allow adequate curing time before use is not covered under warranty.**

1. The deflectors mount to the door frames of the vehicle. Ensure the mounting areas are clean, dry and at recommended temperature.
2. Test fit the deflectors to the door frames before attempting final installation.
3. For best fit, the deflectors should mount approximately 28mm down from the top edge of the door.
4. Allow a 2mm gap at the mirror base and observe the distance from the back of the front door deflector to the door edge. The rear deflector should be set back from the door frame the same distance. Remove the deflectors.

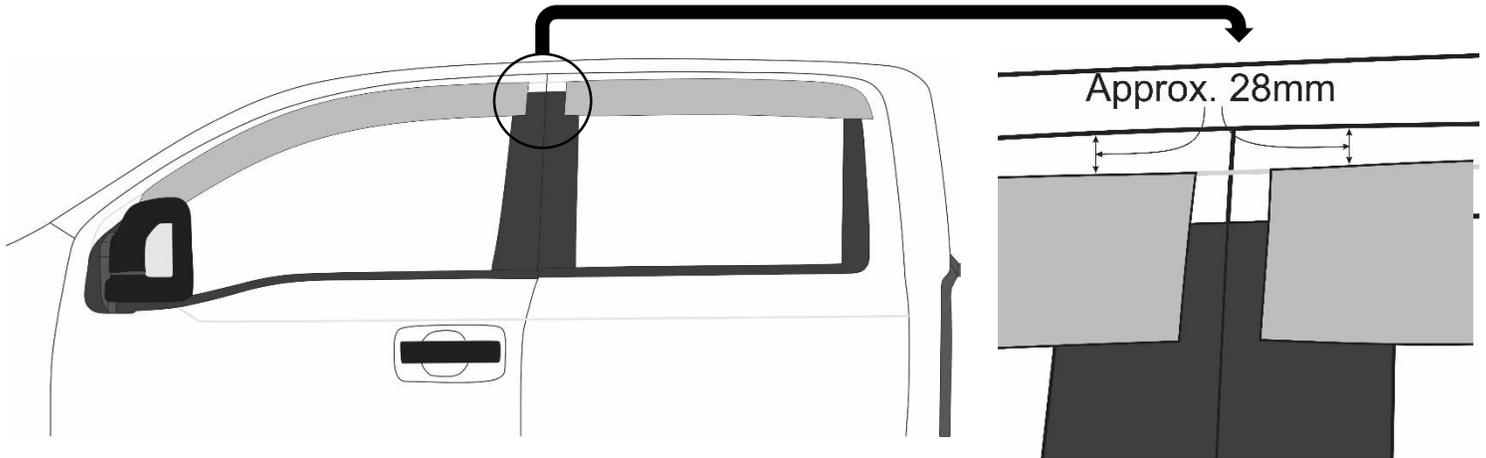

5. Clean the mounting areas aggressively with alcohol wiping pad and dry with a clean cloth or paper towel to remove any finger prints, oils or waxes that may be on the surface
6. Starting at the back edge of one deflector, peel the first 5cm (2 inches) of the protective backing from the adhesive on the horizontal flange of the deflector. Peel the first 5cm (2 inches) of the protective backing from the vertical flange as well. Fold back the protective backing from the adhesive as shown in the illustration.

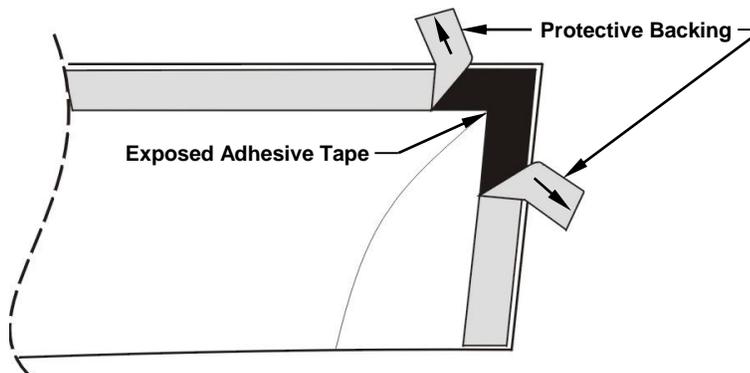

7. Reposition the deflector on the window frame as described in steps #2 and #3. Adjust the deflector for best fit. While pressing the deflector into place, pull the protective backing out from between the deflector and door frame without disturbing the fit of the deflector.
8. Once the deflector is in place, press down hard along the entire mounting flange to ensure that the adhesive is fully adhered to the vehicle.

**NOTE:** to ensure maximum adhesive bond do not wash your vehicle for 24 hrs.



Thank you for purchasing **FORMFIT** Side Window Visors.  
Retain sheet for Care Instructions and Kit Information.