

FORM FIT Hood Protector Installation Instructions

HD 20H18
Toyota Sienna 2018-Up

PARTS LIST

Hood protector



Abrasion pads (9)



Metal mounting bracket - Type A (2)



Metal mounting bracket - Type B (2)



Push-type retainer (8)



Bumpons (5)



Pins (5)



Screws (5)



Clip bodies (5)



Metal "L" brackets (5)



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver #2
Tape measure
Clean cloth or paper towel

INSTALLATION

-Ensure the vehicle is clean and completely dry before installation.

-Ensure all traces of wax, grease, silicone and any other contaminants are removed from vehicle surface where the accessory is to be installed.

-Use of the correct screwdriver will facilitate a trouble free installation. Do not attempt to use #1 or smaller Phillips screwdriver or any type of powered screwdriver.

CARE

-Hand clean the protector using a mild soap and water solution or plastic cleaner only.


Avoid automatic car-wash equipment where a brush and/or soft cloth come in contact with the hood protector. Touch-less style automatic car-wash equipment is less likely to harm the air protector.

SERVICE

-Periodically check to confirm the protector is securely attached to the hood.

WARNINGS


-Do not pull or push on the protector when opening or closing the hood.

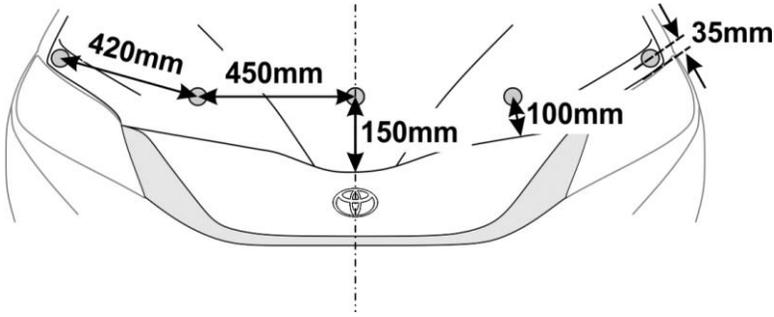


1. Be sure that the hood is clean and dry.
2. Install the five (5) bumpers as shown.

Attention: The bumpers must be installed on the hood, not on the deflector! If the bumpers are installed on the deflector, they may wear through the paint. **Note:** Locate the center of the hood using a tape measure and place the bumpers as shown in the illustration.

Looking at underside of the hood
Anti-abrasion Pad Locations

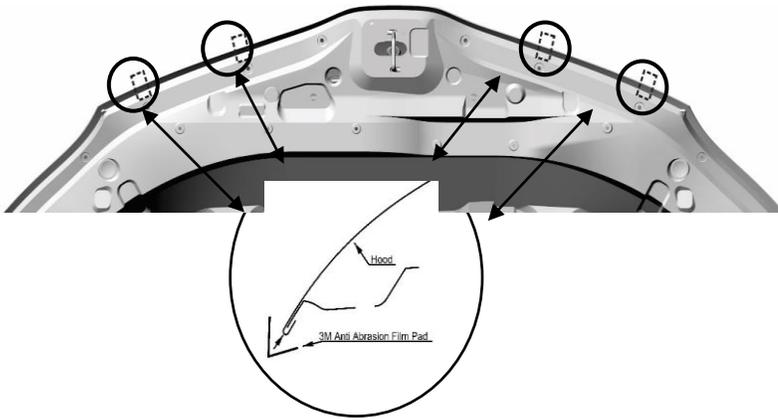





3. Open the hood of the vehicle. Peel and fold anti-abrasion film pads in half over the edge of the hood, in the four (4) locations shown.

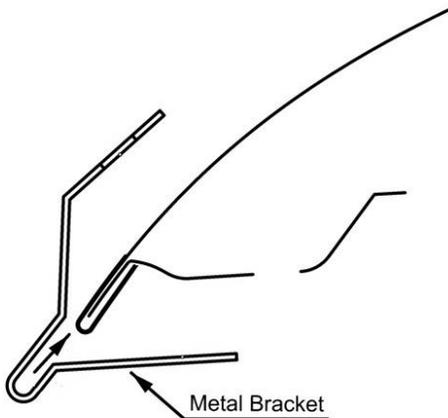

4. Install Metal Brackets over the hood edge in their correct positions. Align the hole in the bottom leg of the bracket with the round hole in the hood. See Illustration


NOTE: Use the metal Bracket Guide to determine where the Metal Brackets are installed in following steps. See Illustration.

Metal Bracket Guide

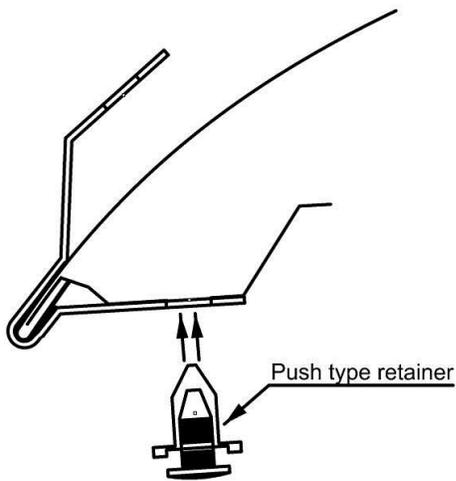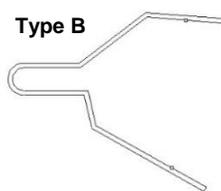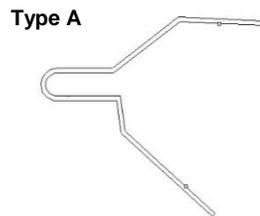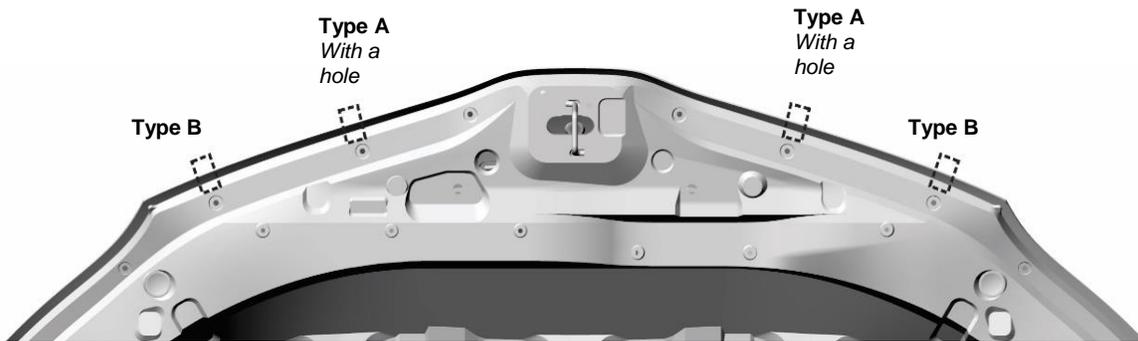


5. Insert a push type retainer through the metal bracket and into the hood. Ensure leg of the bracket is well seated against the surface of the hood and push the center pin of the retainer assembly to lock it into place. See *Illustration*.

NOTE: Engaging the center pin of the “push-type retainer” is best accomplished by placing a #2 Philips screwdriver into the recess of the center pin and pushing the pin, followed by tightening 90 degrees to fully engage the retainer into the hood. The retainer can be removed by unthreading the center pin with a Philips screwdriver, however initial installation is best done using the “push” method described above.

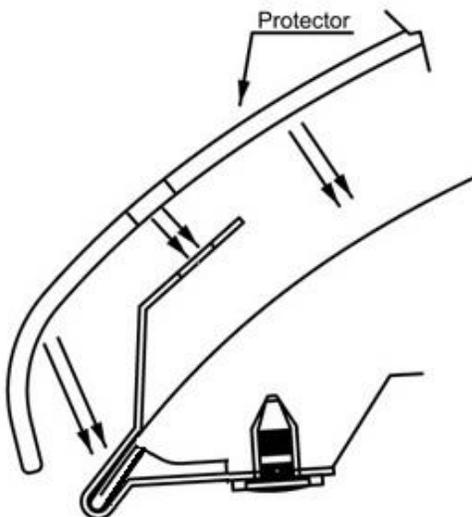


6. Place the deflector onto the metal brackets aligning the holes in the deflector with the holes in the metal brackets.


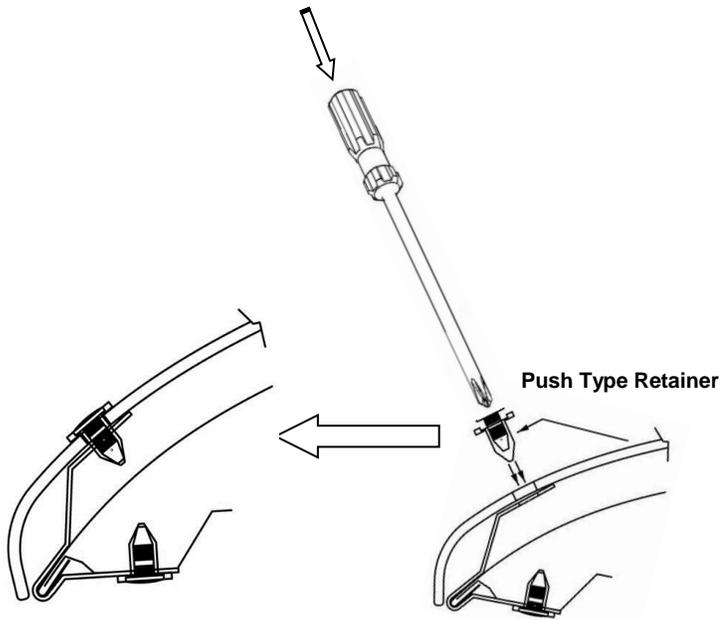


7. Place the deflector on the hood, resting on the four (4) metal brackets; align the holes in the deflector with the holes in the metal brackets. Insert a "push type retainer" through the hole in the protector, and into the bracket. Ensure the protector is well seated against the surface of the metal bracket, and push the center pin of the retainer assembly to lock it into place.

8. Once the push-type retainer is seated in the metal bracket, push the center pin into place. Use a Phillips head screwdriver and seat the center pin with a sharp push.


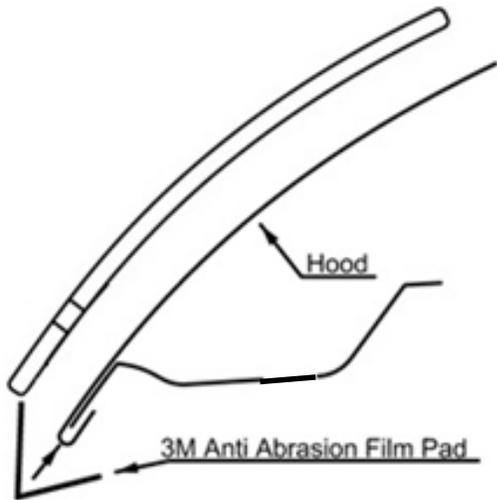


9. Peel and fold an anti-abrasion film pad in half over the edge of the hood in alignment with the remaining holes in the deflector.

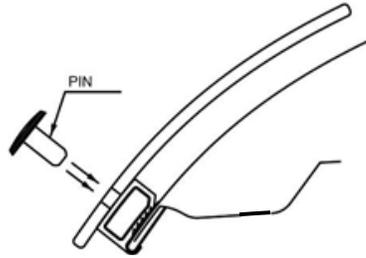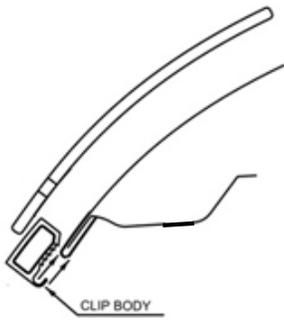

10. Place a clip body over the anti-abrasion film pads.

11. Insert a pin through the deflector into each of the clip bodies.

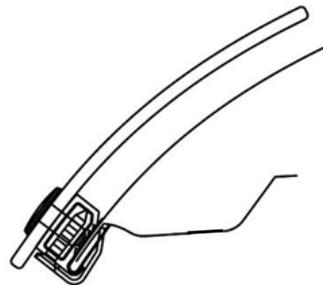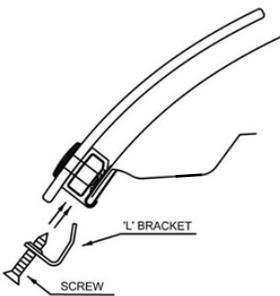

12. Insert a #6 x 5/8" screw through the 'L'-bracket and into the clip body.

13. Make sure all the components are well seated together; the deflector is centered on the hood, and then tighten the screws into the clips.

Thank you for the purchase of a FormFit Hood Protector.

If you have any questions or comments please email: customer@focusauto.com.

On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.

Note: Do not pull on the deflector when opening or closing the hood.

CARE INSTRUCTIONS

Clean the deflector with a mild soap and water solution or plastic cleaner only. Do not use chemicals or solvents. **Periodically check to make sure the bumpers are in place and the protector is secure. Avoid using automatic car washes.** Do not pull on the deflector when opening or closing the hood.