

FORM FIT Side Window Visors

Installation Instructions

SD 13A08-2
Nissan Altima Coupe (2008-2012)

HARDWARE KIT

- 3M Double-sided Body Moulding Tape
 - Already applied to the deflector
- 1 – 3M Adhesive Promoter

TOOLS REQUIRED

None


Attention: This product uses a 3M adhesive product that requires installation and curing temperatures of at least 20°C/ 70°F for 24 hours to develop maximum adhesion to the surface. **Failure to install this product at the proper temperature or allow adequate curing time before use is not covered under warranty.**

1. The deflectors mount to the window frames of the doors. Make sure that those areas are clean and dry.
2. **Start** with the Passenger's side door of the vehicle.
3. To understand how the deflector will fit, place the Passenger's door deflector up to the vehicle. Align the start point of the deflector with the start point of the door as shown below. The top edge of the deflector runs flush along the top edge of the window frame.
4. Prime the contact area on the window frame with the adhesive promoter.
5. Beginning at the start point of front door deflector, peel only the first 30-40 cm (12-15 inches) of the protective backing from the tape on the flange of the deflector. Press the deflector into place as determined above. Work forward, removing the protective backing from the tape and pressing the part into place.
6. Once the deflector is in place press down **hard** along the entire flange area to make sure that the tape is fully adhered to the vehicle.
7. Repeat steps 3-6 for the remaining deflector.

CARE INSTRUCTIONS

Clean the deflectors with a mild soap and water solution or plastic cleaner only. Do not use chemicals or solvents. Periodically check to make sure the deflectors are secure. Avoid using automatic car washes.

ILLUSTRATION – SIDE VIEW ALIGNMENT

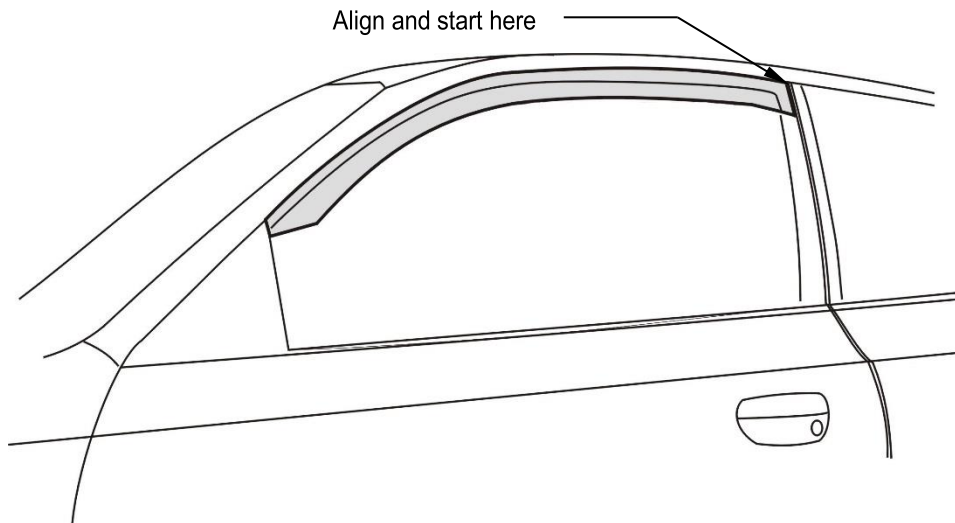

3M Primer 94 Instructions

- Squeeze tube in middle to break inner ampule
- Apply to clean, dry surface
- Allow at least 5 minutes to dry before taping



Thank you for purchasing **FORM FIT** side window visors.
Retain sheet for Care Instructions and Kit Information.

FORMFIL Fenêtre côté visières

Instructions d'installation

SD 13A08-2
Nissan Altima Coupe (2008-2012)

Sachet des fixations

Ruban moulant 3M à deux côtés adhésifs
- déjà appliqué sur le déflecteur
1 – Promoteur adhésif 3M

Outils requis

Aucun


Attention: Ce produit contient un ruban adhésif 3M. Il est nécessaire d'effectuer l'installation à une température d'au moins 20°C/ 70°F. Laisser 24 heures pour permettre à l'adhésion de se solidifier. **Une installation inadéquate annule la garantie.**

1. Les déflecteurs s'installent sur les bordures des fenêtres. S'assurer que ces endroits sont propres et secs.
2. **Commencer** avec le côté conducteur.
3. Pour aider à comprendre l'installation du déflecteur, placer le déflecteur avant sur la porte avant du côté passager. Aligner l'extrémité du déflecteur avec la bordure de la porte tel qu'indiqué à l'illustration ci-dessous. La bordure supérieure du déflecteur s'ajuste au long de la bordure supérieure de la fenêtre.
4. Nettoyer la surface en contact avec la bordure de la fenêtre avec le promoteur adhésif.
5. Aligner et commencer le déflecteur pour la porte avant avec l'espace de la porte, commencer à peeler la bande protectrice du ruban et appuyer sur le déflecteur pour le mettre en place tel que déterminé à l'étape 3.
6. Une fois le déflecteur en place, appuyer vers le bas **fermement** tout au long de la bordure de montage pour s'assurer que le ruban est bien adhérent au véhicule.
7. Répéter les étapes 3-6 pour le côté passager.

Instructions pour l'entretien

Nettoyer le déflecteur avec une solution faite d'eau et de savon doux ou avec un nettoyant de plastique seulement. Ne pas utiliser de produits chimiques ou de dissolvant. S'assurer périodiquement que les déflecteurs sont toujours en place. Éviter de laver le véhicule dans un lave-auto automatique.

ILLUSTRATION – VU DE CÔTÉ, ALIGNEMENT

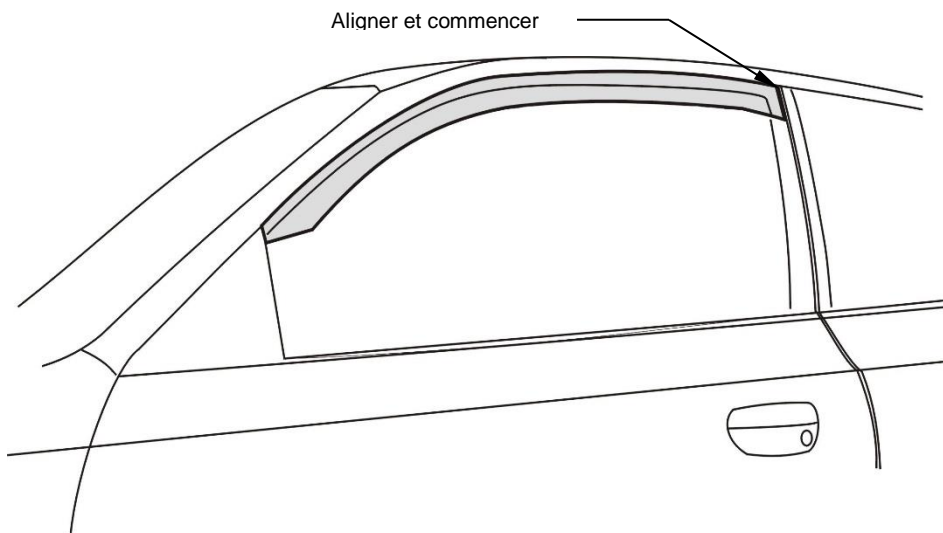

3M Primer 94 Instructions

- presser le tube au milieu de briser l'ampoule intérieure
- appliquer à nettoyer la surface, sec
- permettre au moins 5 minutes pour sécher

Merci d'avoir acheté un accessoire par **FORMFIL**.
Conserver cette feuille pour les instructions d'entretien et les renseignements concernant le nécessaire d'installation.